

CyberithIK

**FEET TRACKERS -
ASSEMBLY & MOUNTING INSTRUCTIONS**



CYBERITH

Table of Contents

Introduction – The Feet Tracker Mounts 3

Assembly of the Vive Tracker Mounts..... 4

Correctly mounting the Vive Trackers onto the feet..... 6

Appendix: Explode View of a Tracker Mount..... 8

Introduction – The Feet Tracker Mounts

While elaborate explanations are not required on how to wear a VR headset and how to hold VR hand controllers correctly, mounting StreamVR Trackers onto the feet is not as simple.

It requires additional components (the mounts) & correct positioning on the feet.



We have created mounts for HTC Vive Trackers, that you can obtain from Cyberith directly. Please email us at support@cyberith.com, so that we can send you the mounts swiftly and efficiently.

Alternatively, if you don't mind going through the hassle, you can also create them on your own.

Each mount consists of:

- A strap with a buckle, that's approx. 40 cm long
- 2 custom made 3D-printed parts. You can download the STL files from the Cyberith Developer Center.
- A ¼" screw, that is 3/8" long and has a flat head. These types of screws are typically sold as "photo screws".

Attention: That screw is NOT an M6x10mm screw. An M6 screw may seem to work at first, but it breaks the threads on your Vive Trackers. The thread pitch is different!



The special ¼" photo screw


- 4 tiny M4x8mm screws (or similar screws) to connect the two 3D-printed parts.

Assembly of the Vive Tracker Mounts


1. Use the photo screw (1/4" screw) to mount the first 3D-printed plate (**the one with the hole in the center**) onto the Vive Tracker.




2. Insert the strap, so that the buckle is close to the tracker. Then, use the 4 other screws to mount the second 3D-printed plate (the one with the pin). The second plate holds the strap in place.

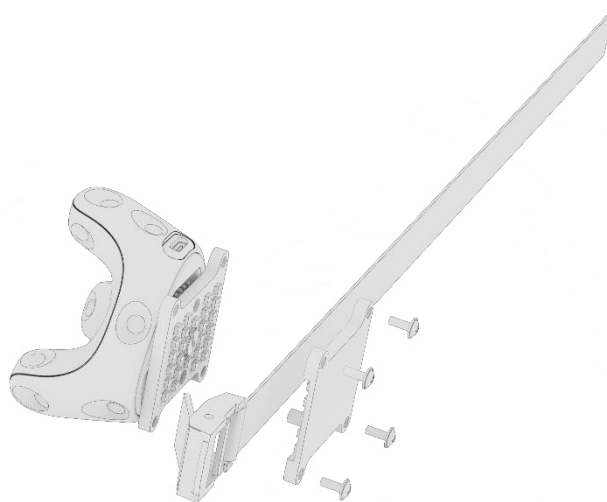

NOTE: Insert the strap differently on the second strap (mirror-inverted), so that the buckle is on the outside of the foot both on the right and on the left foot.

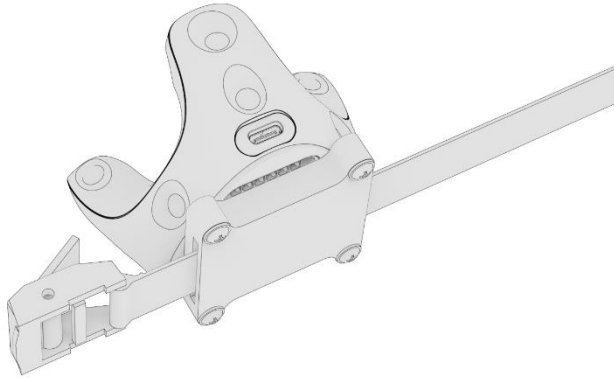

The Tracker for the left foot

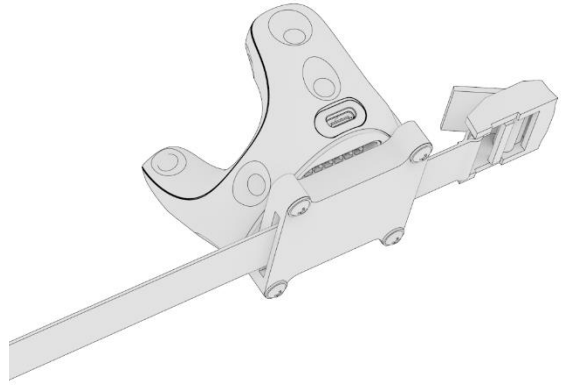

The Tracker for the right foot

Correctly mounting the Vive Trackers onto the feet

1. Put the Vive Trackers on your feet and make sure, that:
 - a. The Trackers **sit on your instep or midfoot**.
 - b. The **buckles are on the outside of your shoes**.
 - c. The **upside of the Tracker matches the upside of your foot**:
 - i. For all the current Vive Trackers (Vive 3.0 Trackers and older models), the USB port must be close to your legs and far from your toes.
 - ii. Alternatively to the USB port, you may also use the position of the LED on the tracker to identify the correct orientation



2. Put on the Virtualizer Overshoes and make sure, that:
 - a. The **straps of the overshoes do not cover the tracker**
 - b. The **buckles and the remaining centimeters of the straps can not scratch the walking surface of the Virtualizer**. Put them inside the overshoes!



Note: The trackers hold much better on your feet when the overshoes are worn. When walking around with the trackers without overshoes, the trackers may come off. When the overshoes are worn, that's not happening.

Please continue with the

**“CyberithIK – Basics & General
Information”**

document now.

Appendix: Explode View of a Tracker Mount

